3 Software

3.1 Installation

3.1.1 Driver installation

Run „CNCUSBControllerDriver.exe” and click „Next” until driver is installed.

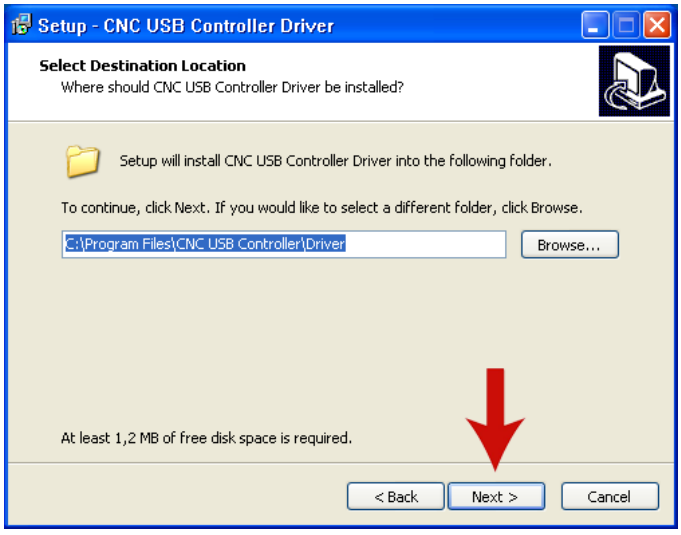

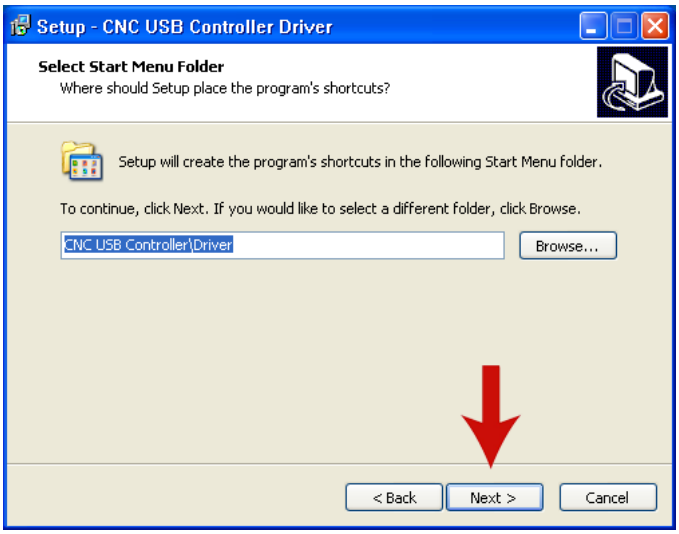
Setup - CNC USB Controller Driver
Select Start Menu Folder
Where should Setup place the program's shortcuts?
Setup will create the program's shortcuts in the following Start Menu folder.
To continue, click Next. If you would like to select a different folder, click Browse.
CNC USB Controller\Driver
Browse...
< Back
Next >
Cancel

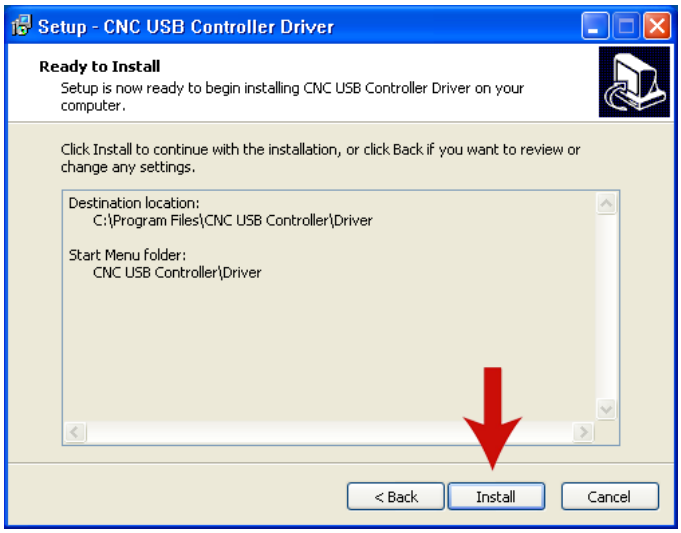
Setup - CNC USB Controller Driver
Ready to Install
Setup is now ready to begin installing CNC USB Controller Driver on your computer.
Click Install to continue with the installation, or click Back if you want to review or change any settings.
Destination location:
C:\Program Files\CNC USB Controller\Driver
Start Menu folder:
CNC USB Controller\Driver
< Back
Install
Cancel

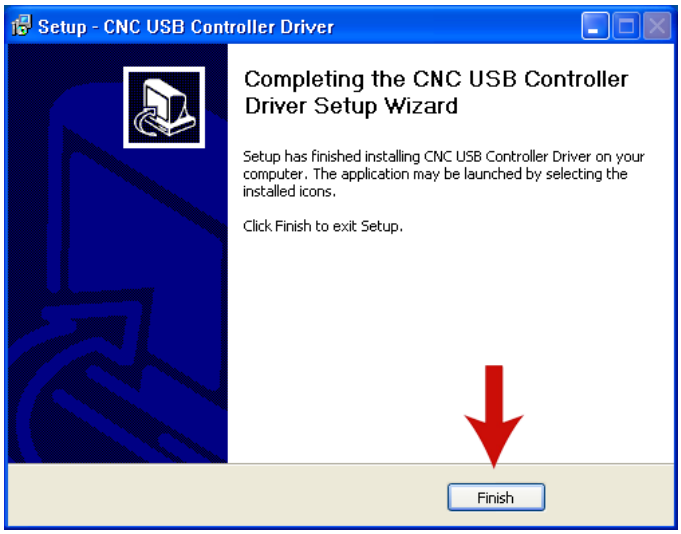
Setup - CNC USB Controller Driver
Completing the CNC USB Controller Driver Setup Wizard
Setup has finished installing CNC USB Controller Driver on your computer. The application may be launched by selecting the installed icons.
Click Finish to exit Setup.
Finish

3.1.2 Completing driver installation on XP

If driver is succesfuly installed (see chapter 3.1.1) Windows XP will detect controller after you connect it. „New Hardware Wizard” will complete your driver installation.

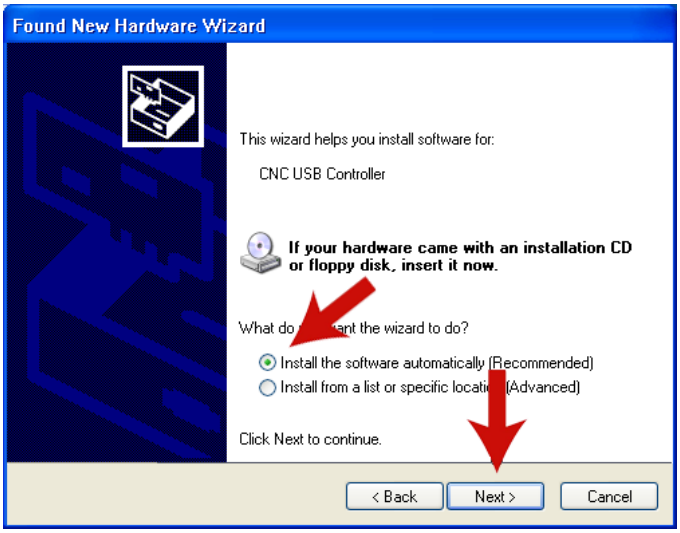

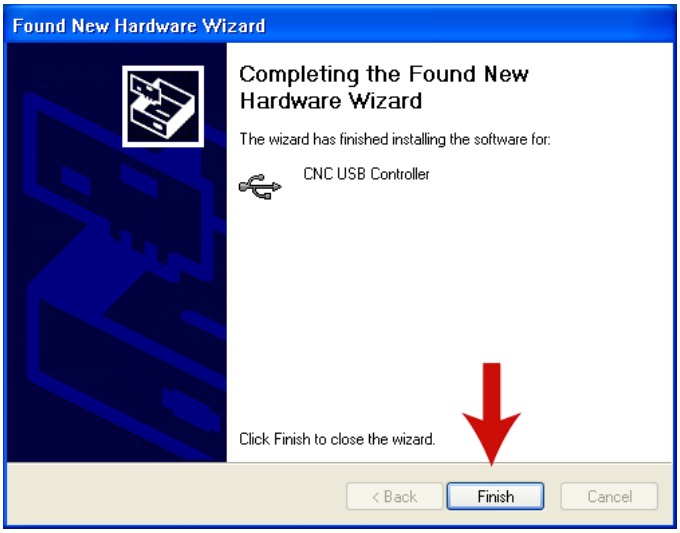

3.1.3 Completing driver installation on Windows7

If driver is succesfuly installed (see chapter 3.1.1) Windows 7 will detect controller after you connect it.
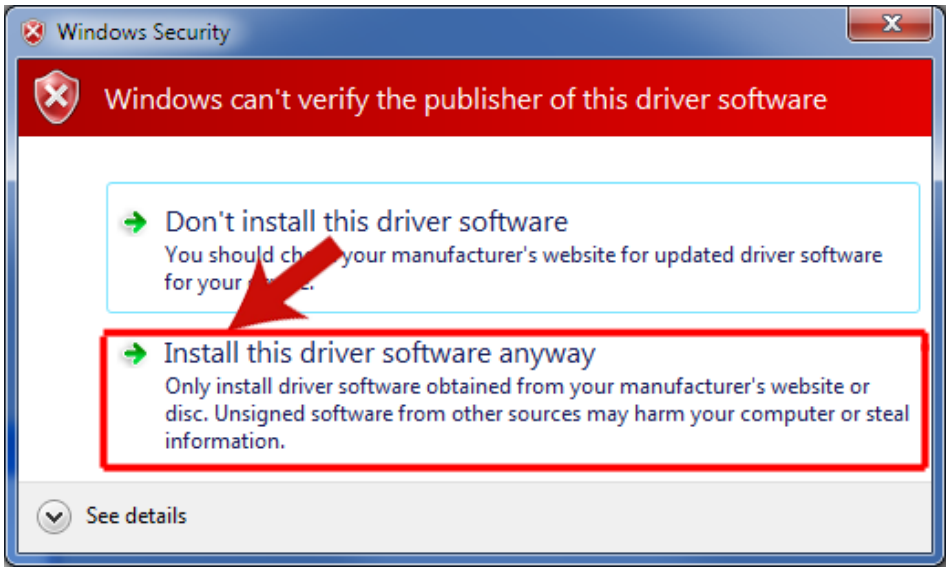
When Windows7 warns you that it can not verify publisher, select „Install this driver software anyway”. This driver is not malicious software and will not harm your computer.